


Fasten the Front Zip.

Fasten the interlocking harness belt buckles (A).

Thread the quick release harness (B) through the cam buckle and fasten. Fasten the two thigh strap buckles (C) ensuring that the 25mm webbing tidies are in place and correctly threaded.

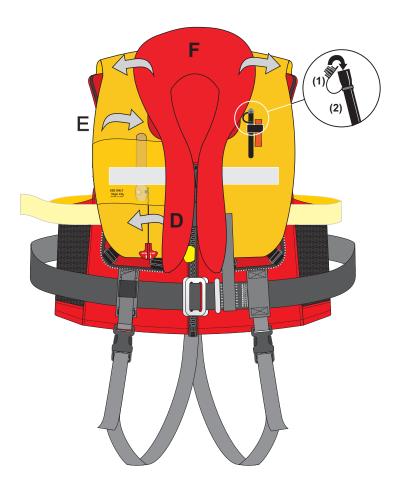

Ensure that the valve cap (1) is replaced on the inflation tube (2) after deflating the Lifejacket.


Check that the manual inflation toggle is threaded under the zip and can be seen resting by the jacket buckle.

Fold the sides of the Bladder (D) and (E) over each other. Pull the cover (F) over and fasten the velcro.

Repeat the process on the other side of the jacket.

F

Pull the bladder cover (F) over and attach the velcro on the front of the jacket only. Run the zip slider (Z) round the outside of the cover to (X) and back to (Y) to close the zip. As the zip passes the plastic bladder retainers check that they are threaded correctly and without obstruction. Fasten the small velcro tab over the end of the zip. Repeat on the other side ensuring that the lifting becket is inside the folded bladder

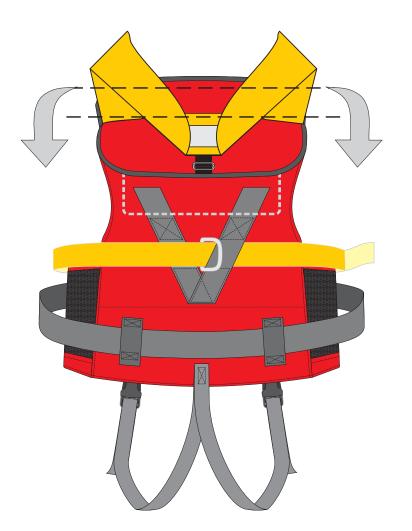

Turn the jacket over and fold the collar of the bladder down once, then pull the bladder cover over and fasten the velcro.

