



**Contents of box:**

- |                              |                      |
|------------------------------|----------------------|
| 1. S20 unit                  | 2. Information card  |
| 3. Warranty information      | 4. Oral tube bracket |
| 5. Oral tube to unit adapter | 6. S20 pouch         |
| 7. Crocodile clip            | 8. User manual.      |


To fit the S20 unit to your lifejacket you will need the Information card, Crocodile clip, and user manual.



**Untie lanyard.** The S20 is supplied with an orange lanyard loosely tied onto the white section of the S20. Undo this knot, so there is a short lanyard to the orange tab and a long loose lanyard.




**Open lifejacket.** Open up the left side of the lifejacket to reveal the integrated PLB/Light bracket.

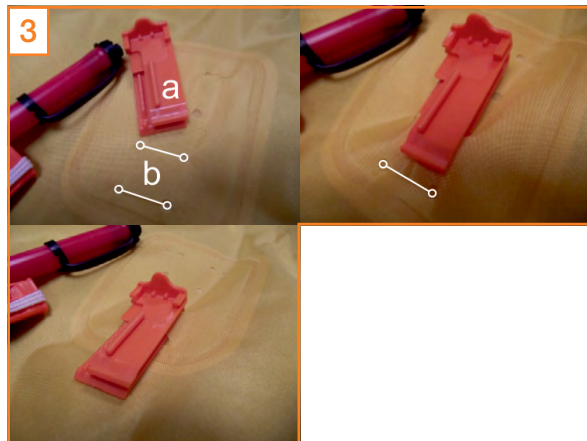

**Attaching crocodile clip.** Attach the crocodile clip (a) to the integrated PLB/Light bracket (b) as shown above.



**Attaching S20 unit.** Attach the S20 unit (a) to the crocodile clip (b) by sliding it down the recess until an audible click is heard.

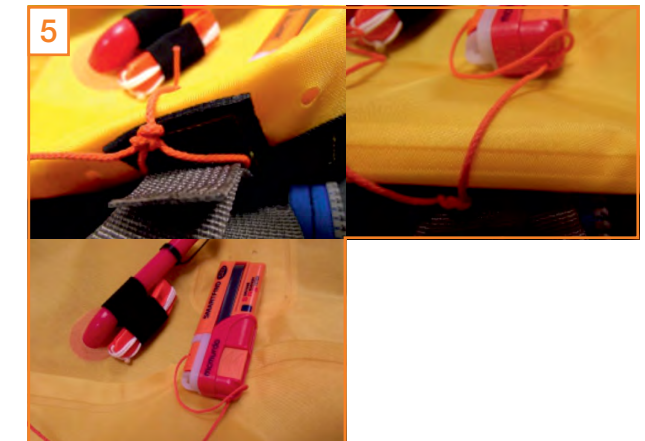

**Tie the lanyard.** Once the unit is attached to the lifejacket tie the orange lanyard to the bladder retainer using a bowline. Tie off as short as possible, taking up all the slack without distorting the shape of the lifejacket.



**Secure with bowline.** Secure the end of the excess cord to the white section with a bowline.



**Arming the S20.** To arm the S20 unit remove the orange tab from the unit. Lift the right side slightly & push left with your finger.



**Re-packing the lifejacket.** Lay the excess lanyard and the orange tab to the side of the unit when packing the lifejacket. Follow the packing procedure as outlined in the user manual. Your S20 unit is now fitted and armed inside your lifejacket, on inflation you S20 will automatically activate and a signal will be transmitted.

## DEACTIVATION NOTICE!

**Note:** If the unit is accidentally activated during assembly please follow S20 instructions in user manual.