


# CREWSAVER SURFACE LIGHT (CSL) FITTING INSTRUCTIONS FOR CREWSAVER LIFEJACKETS




## ORAL TUBE ATTACHMENT METHOD

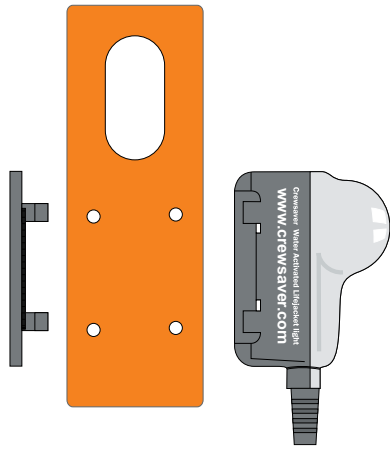


### Contents of fitting kit:

- CSL light
- Attachment clip
- Fabric light retainer

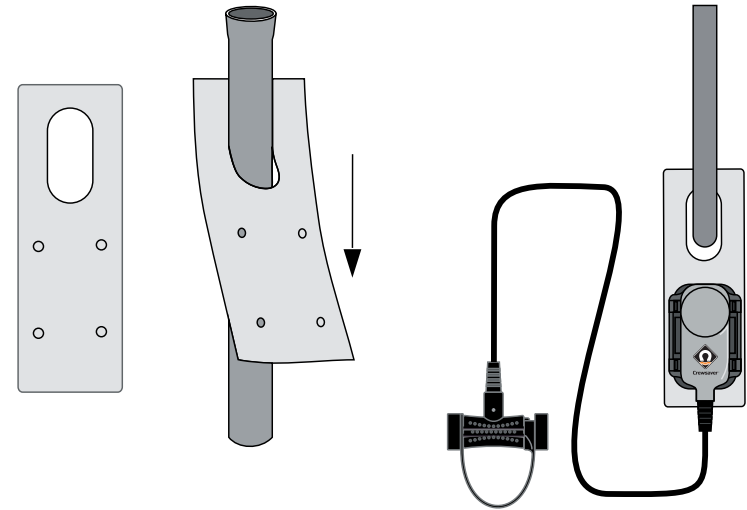

**Oral tube attachment method.** The light is secured to the retainer by using the clip provided, this is then placed over the manual inflation tube (Oral tube).


## Manual Activation CSL Light Switch A

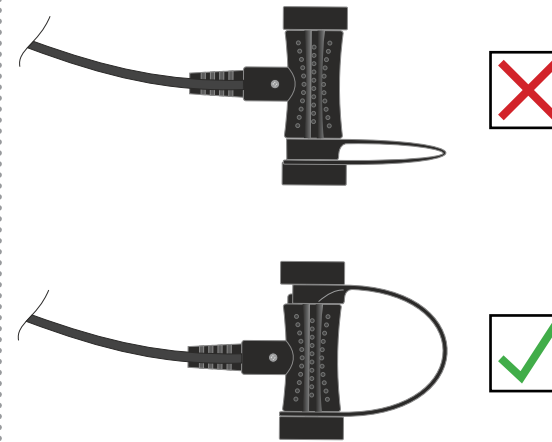

**Light activation.** Please ensure the switch loop is set to the automatic position as shown here with a tick. Ensure this is done before securing switch to your jacket. The light can be activated manually by removing the loop from the garage.


## Manual Activation CSL Light Switch B

Manufactured as standard on all CSL lights manufactured after April 2016. Fitted as standard on all lifejackets that include a CSL light manufactured after April 2016.

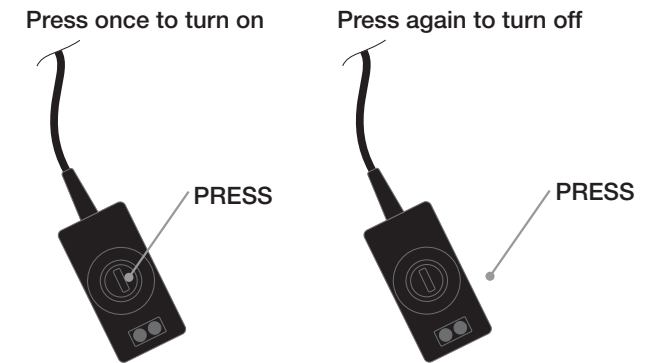


**Light switch.** All CSL lights manufactured after April 2016 are now being supplied with the light switch. The light switch does not need to be activated, it is ready for use straight away.

## BLADDER ATTACHMENT METHOD

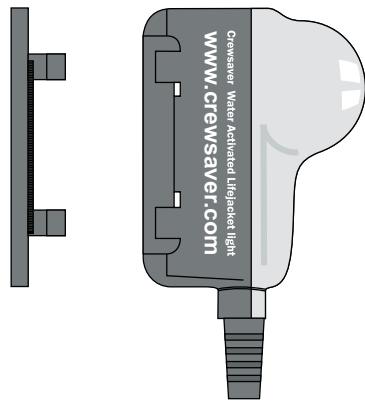


### Contents of fitting kit:

- CSL light
- Attachment clip
- Fabric light retainer (not required)

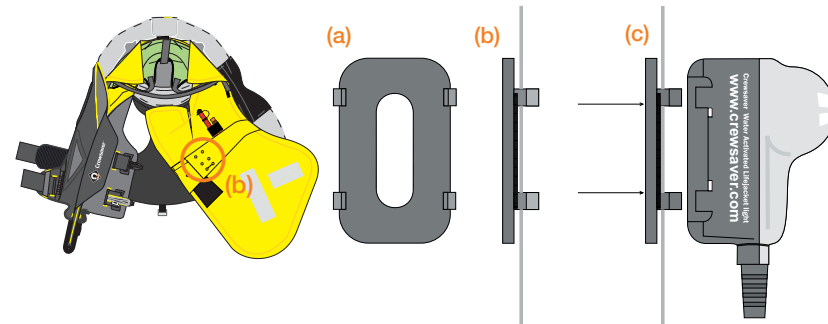

**Bladder attachment method.** The CSL light is supplied with a fixing clip (a). This clip is to be placed behind the strip of the lifejacket (fabric light retainer) (b). The light is secured by pressing the clip onto the back of the bladder (c).

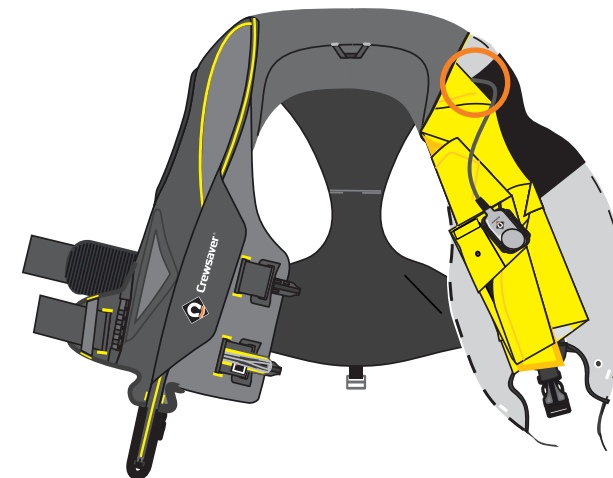

**Securing switch.** Secure the switch to the back of the bladder with velcro provided (ErgoFit). If there is no velcro on your jacket, pack the switch in this position so the switch will contact the water on inflation.

### WATER ACTIVATION

Both light switch options activate automatically on contact with water.